

1. The cabin air filter is located behind the glove box in the passenger side. The glove box will have to be removed to acces the filter housing.

2. Open the glove box and press to the inside each of to rear top corners to release the retaining lugs.

3. Once the reataining lugs have been bypassed drop or remove the unit completely. The cabin air filter housing will be right at the top of the blower. Unclip the housing lid from both sides.

4. Slide the old filter out carefully to avoid accumulated debris spreading around. Clean area and insert the new filter making sure it is in the right air flow direction. Refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz