

SUZUKI SWIFT FZ, RS415 & RS416

### FILTER IS LOCATED BEHIND THE GLOVE BOX

#### WORK PROCEDURE

- 1 Open the glove box and press both top corners inwards to bypass the retaining lugs allowing the lid to drop completely.
- 2 Remove the cabin air filter housing lid by unclipping it and slide out the old cabin air filter carefully to avoid any accumulated debris from being spread around.
- 3 Slide in the new filter making sure it is facing to the right air flow direction and refit all components in reverse order .

