

1. The cabin air filter is located in the passenger footwell underneath the glovebox unit.

2. Remove the trim underneath the glovebox by removing the nuts securing it.

3. Once the trim is out the cabin air filter housing will be located to one side of the HVAC blower. Remove the bolts holding the housing lid and remove.

4. Reach for the filter and slide out carefully to avoid any accumulated debris from being spread around. Clean the area and fit new filter making sure it is in the right air flow direction. Refit all components in reverse order.

RYCO Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz