

1. The cabin air filter is located behind the lower trim panel in the centre console on the drivers side.

2. For better working space, slide the drivers seat all the way back. Unclip the lower trim (3 clips, 2 at the front and 1 at the back) and remove. Then proceed to pull back the carpet against the firewall.

3. The clutch pedal (if manual has to be removed) simply undo the four (4) bolts securing it and pull aside. The cabin filter housing should be accessible at this point. The lid is secured by to Torx screws. Undo both screws and remove the lid.

4. Grab and slide the old cabin filter out carefully to avoid any accumulated debris from being spread around. Note: If the vehicle is automatic there is no need to remove the pedal, simply press it hard to allow for space to remove the filter.

5. Slide in the new cabin air filter making sure it faces to the correct air flow direction and refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz