

1. The cabin air filter is located in the engine bay behind the passenger side cowl.

2. Open the bonnet and remove the passenger side cowl trim by removing the clips holding the trim edge against the cowl. Lift the trim slightly until the inner metal clips are visible and use a screw driver to help pushing them out.

3. Flex up the water shield and reach for the old filter.

4. Slide the old filter out carefully to avoid accumulated debris spreading around. Clean area and insert the new filter making sure it is in the right air flow direction ensuring the filter is seated properly in the housing. Refit all components in reverse order.

RYCO Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz