

1. The cabin air filter housing is located below the engine cowl trim. It has to be removed to gain access.

2. Start by removing both wiper blade arms, then pull the rubber gasket surrounding the trim on the engine side. Now pull the trim up gently and move aside.

3. The cabin air filter will be immediately visible right in the middle of the cowl. Unclip from the sides and pull out the old cabin air filter carefully to avoid any accumulated debris being spread around.

4. Clean the area and insert the new filter making sure it is facing to the right air flow direction and refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz