

1. The cabin air filter is located In the centre console on the driver's side against the firewall.

2. Remove the right hand centre console lower trim. Identify the cabin air filter housing and proceed to remove the 4 screws securing it.

3. To remove the lid, grab the filter and slide it out carefully to avoid any accumulated debris spreading around.

4. Slide the new filter in making sure it is facing to the right air flow direction and refit all components in reverse order.

RYCO Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz