


TOYOTA PRIUS HYBRID ZVW50R, NHP10R, ZVW40R SERIES (2ZRFXE, 1NZFXE ENGINE) 03/2012 - 05/2022



**STEP 1**  
Location of battery air filter is on drivers side, underneath rear passenger seat.

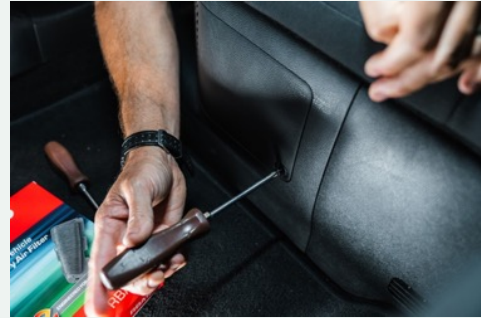


**STEP 2**  
Using phillips head screw driver, unscrew and remove screw.



**STEP 3**  
Remove locking clip that was held in by phillips screw.



**STEP 4A**  
Using flat head screw driver or hands, wedge in-between around perimeter of battery filter OEM housing flap and back seat to begin removal of housing flap - then gently pull open flap to release remaining tabs.

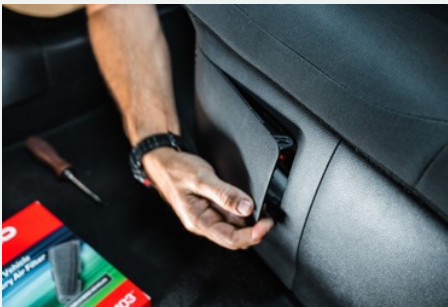

**STEP 4B**  
Using flat head screw driver or hands, wedge in-between around perimeter of battery filter OEM housing flap and back seat to begin removal of housing flap - then gently pull open flap to release remaining tabs.



**STEP 5A**  
Once flap is released, remove old battery filter by releasing the filter from the tabs holding it in place by pulling away from OEM housing flap. Then install new battery air filter in same orientation as old filter was installed.



**STEP 5B**  
Once flap is released, remove old battery filter by releasing the filter from the tabs holding it in place by pulling away from OEM housing flap. Then install new battery air filter in same orientation as old filter was installed.



**STEP 6**  
Repeat above steps in reverse to re-install OEM battery air filter housing flap.