


R2871P FITMENT INSTRUCTION

1  Change filter cap o-ring and lubricate both o-rings.	2  Click
3 Caution: Risk of leakage  Note: Apply a light coat of supplied grease on both sealing rings. Use disposable plastic gloves to avoid any damage to the rings. grease Sealing ring Nr. 1 grease Sealing ring Nr. 2	
4 	5  Max. 55+5 Nm Max. 41+3 lb-ft Socket size 36

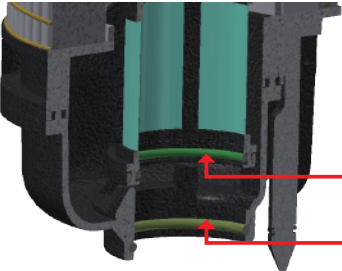