

1. The cabin air filter is located behind the lower trim panel on the drivers side centre dash console.

2. Identify the lower trim panel and remove the screw that is holding it in position with a TX20 and remove the trim. The housing will be easy to spot at this point.

3. If the vehicle is manual press the clutch pedal with one hand and with the other remove the two bolts holding the housing lid. If it is automatic press the brake pedal to try geting the best space to remove bolts

4. With the lid out of the way remove the old filter, due to space it will have to be squashed and bent a little bit. Clean housing of dirt and fit the new cabin filter in the right air flow direction (see side of filter for flow direction) and refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz