

RYCO TRANSMISSION FILTER PAN

OIL PAN TORQUE SEQUENCE

- 1 Install the oil pan and attach all screws until they just make contact with the pan.
- 2 After all screws are installed, tighten scews in order 1 through 23 as shown in the schematic.



FIGURE 1

TIGHTENING TORQUE FOR SCREWS ON A PLASTIC OIL PAN = 10 Nm ± 1.0 Nm.

