

1. The cabin air filter is located in the passenger side below the windscreen in the engine bay.

2. Remove the trim located on the top corner against the cowl.

3. Once the trim is removed the cabin air filter will be accesible.

4. Reach for the filter and slide out carefully to avoid accumulated debris being spread around. Clean area and insert new filter making sure it is in the right air flow direction. Refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au Ryco Group A Division of GUD NZ Holdings Ltd 626A Rosebank Road, Avondale Auckland New Zealand www.ryco.co.nz