

1. The cabin air filter is located behind the glove box compartment unit.

2. Open the glove box and turn both turn-switches at top corners to remove the retaining lugs, allowing the lid to drop completely.

3. Open the cabin air filter housing lid by pressing the clips on the right. Slide out the old cabin air filter carefully, to avoid any accumulated debris from being spread around.

4. Slide in the new filter, making sure it is facing to the right air flow direction and refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www .rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www .ryco.co.nz