

1. The cabin air filter is located in the engine bay below the cowl on the passenger side. The cowl requires to be removed.

2. Open the bonnet and remove the eight (8) clips along the bottom section of the cowl trim panel and unscrew the two (2) nuts located in the middle section and the other to the drivers side.

3. Remove the seven (7) screw caps along top of the panel and remove the screws. Pull the trim out.

4. Pull the old cabin filter out, grabbing it from the corners and sliding it up. Do it carefully to avoid any accumulated debris from being spread around.

5. Slide in the new filter making sure it faces to the right air flow direction and refit all components in reverse order .

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz