

1. The cabin air filter is located in the engine bay below the middle section of the windscreen.

2. Open the bonnet and refer to the round plastic housing in the centre section of the engine compartment closest to the firewall.

3. Undo the two (2) screws securing the housing and remove it.

4. Grab the old filter and remove carefully to avoid any accumulated debris from being spread around and clean the area. Slide the new filter in making sure it faces to the correct air flow direction and refit all components in reverse order.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz