

1. The cabin air filter is located in the engine bay below the windscreen.

2. Lift the plastic trim right on the centre of the windscreen. The cabin air filter housing is there.

3. Remove the screws holding the bracket and the housing lid and pull the filter out.

4. Clean the housing from accumulated debris and fit new filter making sure it is in the right air flow direction. Refit all components in reverse order.

RYCO Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz