



- 1: Remove housing lid using a filter "strap-wrench".  
Do not damage as lid is to be used again.
- 2: Remove and discard filter, "O" ring and bevel cut gasket.
- 3: Clean mating face for bevel cut gasket, apply film of diesel fuel to gasket and fit to housing.
- 4: Apply film of diesel fuel to "O" ring and fit to filter element then fit new filter to housing.
- 5: Fit lid to housing slowly (allow fuel to soak into element)  
Tighten until lid contacts housing body.

