

RYCO FILTERS




FITTING INSTRUCTIONS FOR RYCO CABIN AIR FILTER RCA429M PACCAR VARIOUS

Filter is located in the engine bay



1. The cabin air filter housing is located in the engine bay on the left side of the firewall.

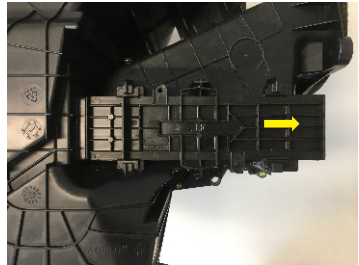

2. Slide the cabin filter cover to the rear of the vehicle. Remove the cover and filter.



3. Remove and clean remaining debris in the housing.



4. Insert the new filter into the housing. Look for UP and FRONT arrows to identify position direction. Refit all components in reverse order.

RYCO Group Pty Ltd
29 Taras Ave Altona
North Victoria 3025
Australia
www.rycofilters.com.au

RYCO Group- A division of
GUD (NZ) Holdings Limited.
19 Bell Avenue, Otahuhu,
Auckland 1060, New Zealand
www.ryco.co.nz