

1. The cabin air filter is located behind the glovebox in the passenger side.

2. Remove the glove box compartment while open by pressing both rear top corners to disengage stopper lugs and let the unit drop down gently.

3. The cabin air filter housing will be now easy to spot. Press to the inside both securing clips located in the middle of the housing lid and remove.

4. Slide the old cabin filter out carefully to avoid accumulated debris spreading around. Clean the area and insert the new filter making sure it is in the right air flow direction. Refit all components in reverse order.

RYCO Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz