






FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA115P. FORD FOCUS (Filter is located in engine bay)

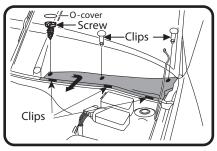


1: Park wipers straight up. Open bonnet. Remove screw cover. Remove screw. Lift 2 clips at rear. Undo 3 clips at front & lift cover out.

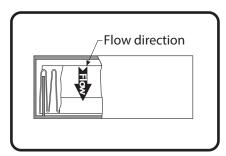

3: Fit pleat over fence as shown, both ends.

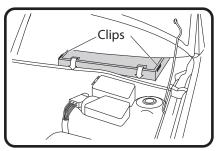

2: Release clips & fold front down to remove filter.

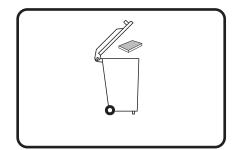

4: Fit new Ryco filter, close front of housing, refit all previously removed parts. Dispose of used filter correctly.

Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au Ryco Group A Division of GUD NZ Holdings Ltd 626A Rosebank Road, Avondale Auckland New Zealand www.ryco.co.nz