


# RYCO FILTERS



## FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA207C/MS/M FORD FOCUS (LS, LT & LV)

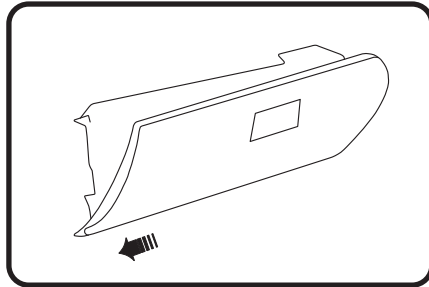

1. The cabin air filter housing is located in the passenger footwell at the end of the centre console. The main wiring harness tray has to be dropped to gain access.
2. For better working space slide the seat back completely and get in the footwell area. Turn the knob in front of the tray to release the tray, pull down and disconnect all connectors and disengage from the rear pivot points. (note: before disconnecting anything make sure you have the radio code, it may be needed).
3. Remove the bolts securing the housing lid and slide out the old cabin filter carefully to avoid any accumulated debris spreading around.
4. Clean the area and slide in the new filter making sure it is facing to the right airflow direction and refit all components in reverse order.

Ryco Group Pty Ltd  
29 Taras Ave, Altona North  
Victoria 3025 Australia.  
[www.rycofilters.com.au](http://www.rycofilters.com.au)

Ryco Group  
A division of GUD NZ Holdings Ltd  
626A Rosebank Road Avondale  
Auckland, New Zealand  
[www.ryco.co.nz](http://www.ryco.co.nz)