





FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA103P. VW BORA(filter located in engine bay)

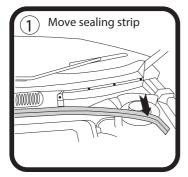


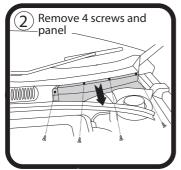




Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au



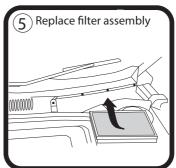

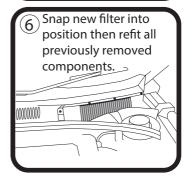






FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA103P.

VW Beetle and Passat (B6)



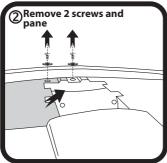




Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au






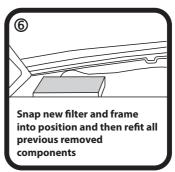







FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA103P. SEAT Cordoba, Ibiza. (Filter located in engine bay)

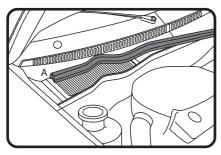


1: Lift weather strip (part A) from ridge to at least centre of vehicle.

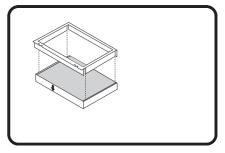

3: Fit new Ryco RCA103P into frame noting that ends of frame fit into pleat space both ends

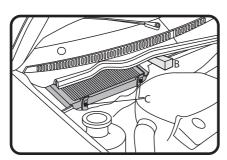

2: Use approx 50mm high support (B) to keep weather strip clear of filter push clips (C) towards engine, lift front of filter assembly and pull out of housing.

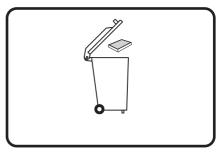

4: Clip filter/frame assembly back in to housing, refit all previously removed components. Dispose of used filter correctly.

Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au






FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA103P.

VW Golf III & Vento

VW Polo, Audi A3 & TT

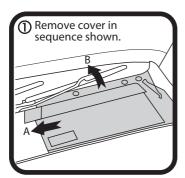





Ryco Group Pty Ltd 29 Taras Ave, Altona North Victoria 3025 Australia. www.rycofilters.com.au

