


RYCO FILTERS




FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA112P.

Volkswagon Transporter T5 & Multivan.(


For Touareg, filter is under glove box)

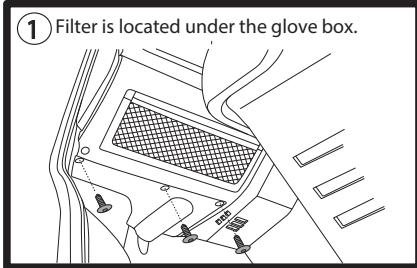


Remove 3 screws as shown.

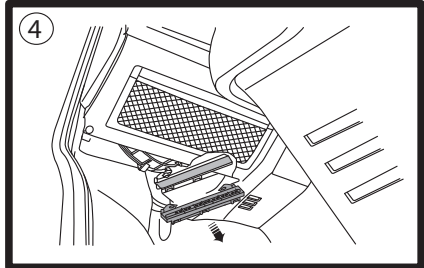


Pull filter cover down and out to remove, pull used filter out from housing.

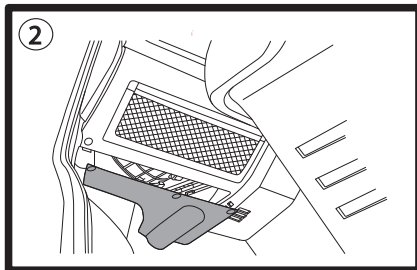


Pull cover down and out to remove.

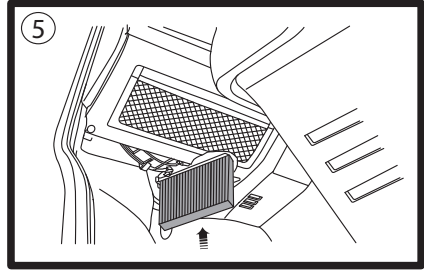

Push new Ryco RCA112P filter into housing.

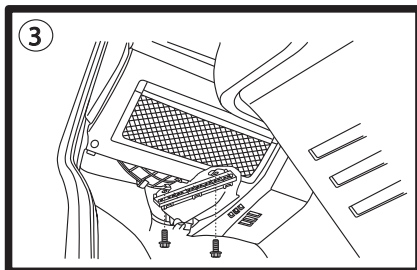

Remove 2 hex headed screws as shown.

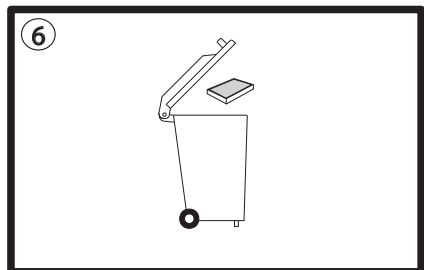

Refit all previously removed components in reverse sequence.

Dispose of used filter correctly.

Ryco Group Pty Ltd
29 Taras Ave, Altona North
Victoria 3025 Australia.
www.rycofilters.com.au

Ryco Group
A Division of GUD NZ Holdings Ltd
626A Rosebank Road, Avondale
Auckland New Zealand
www.ryco.co.nz