





FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA228P. NISSAN MURANO (03/09 - ON) & MAXIMA (06/09 - ON).




2 FILTER LOCATION.

Remove side carpet panel in the passenger side footwell by lifting from front and then pulling the entire panel backwards.



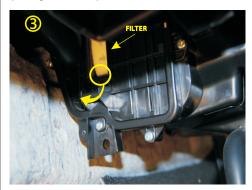

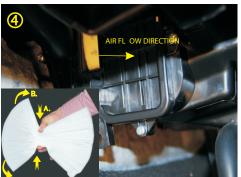

Release the housing cover by depressing the locking tab at the lower end and sliding it downwards. Carefully tuck out the bottom corner of old filter and squeeze & pull it out.

Hold the middle of new filter (A) and squeeze its end (B) to allow it pass through the housing entrance. Ensure the air flow arrow points to the rear of the vehicle. Refit all previously removed components.

Ryco Group Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au RYCO Group A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz