


RYCO FILTERS



FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA305C/MS BMW X5 E70, F15 & BMW X6 E71, F16

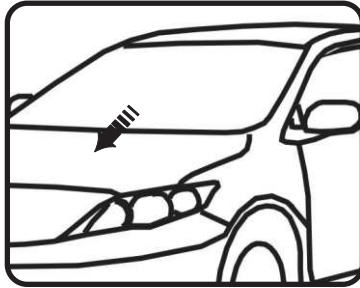

1. The cabin air filter is located in passenger side below the engine cowl trim.
2. Open the bonnet and undo the plastic nuts (x4). Secure the triangle shaped cowl trim and pull out the trim.
3. Unplug the electrical connector located near the bonnet strut and undo all nuts securing the plastic cover. Remove the plastic cover gently. The 2 cabin air filter will be secured to that cover. Turn the cover around so the filters are facing up and unclip them.
4. Clean the area and clip in the new filters making sure they are facing to the right air flow direction indicated on the side of the filter and refit all components in reverse order.

GUD Automotive Pty Ltd
29 Taras Ave Altona North
Victoria 3025 Australia.
www.rycofilters.com.au

GUD Automotive -
A division of GUD (NZ) Holdings Limited
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz