


FITTING INSTRUCTIONS FOR RYCO INTANK FUEL FILTER 2770 TOYOTA COROLLA ZRE152 & 153 / RUKUS AZE151

Scan this QR With your phone to watch the Z770 fitment video





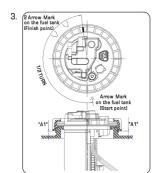


Once the retainer ring is properly located, push down the top of the filter, gently tighten the retainer ring 1/2 turn from start arrow mark on the fuel tank by hand.



Inspect the gap between the retainer ring and the fuel tank.

The gap shall be even (see Fig 3 - "A1" gap), if it is not, you will need to re do the step no. 2.


Example of incorrect installation :

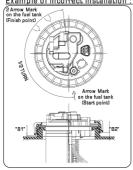



Run fingers to inspect the gap between the fuel retainer ring and the fuel tank.

This illustration shows uneven gap between "B1" & "B2". If it's uneven you will need to re do the step no. 2.

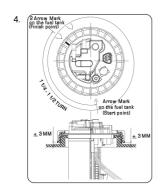





- Using special tool, tighten the retainer ring in total 1 1/4 to 1 1/2 turns from the start arrow mark on the fuel tank.

When the retainer ring is tightened to 1 1/2 turns, the retaining ring thread start mark will be at the first finish arrow mark on the fuel tank.

- Inspect the gap between the retainer ring and the fuel tank.

The gap shall be even around 3 mm. If uneven gap occurred, you will need to re do the step no. 2 and onwards, otherwise fuel can leak out even though the retainer ring is very tight.

- Reinstall all fuel hoses to the filter.
- Start engine. Check for leakage.
- Test drive the car. If no leakage reinstall service
- hole cover and rear seat assembly



AUSTRALIA

Ryco Group Pty Ltd 29 Taras Avenue, Altona North Victoria 3025 Australia www.rycofilters.com.au

NEW ZEALAND

Ryco Group - A division of GUD NZ Holdings Ltd 626A Rosebank Road Avondale Auckland New Zealand www.ryco.co.nz

SOCIAL NETWORKS

Facebook: facebook.com/rycofilters YouTube: youtube.com/RycoFiltersAus Twitter: twitter.com/Rvco Filters