


RYCO FILTERS



FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA357C/M

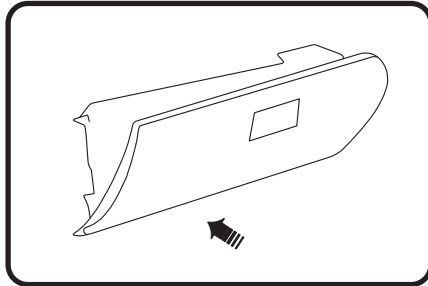

1. The cabin air filter is located behind the glove box compartment on the passenger side. To remove, start by opening up the glove box and removing the three screws at the top edge of the glove box with a T25 Torx screwdriver.
2. At the bottom of the glovebox, pull back the carpeted trim cover to reveal three more T25 Torx Screws. remove these screws.
3. On the Window side of the glove box, pry open the outer trim panel and pull outwards to unclip the five plastic friction fasteners. Once the trim panel is removed, unscrew the single T25 Torx screw, which was hidden by the side trim panel.
4. The glove box compartment can now be pulled out, to do so hold the top of the glove box compartment and gently pull the compartment towards yourself. Remove electrical connector that is connected to the glove box light. The cabin air filter housing should now be accessible.
5. Cabin air filter housing cover will need to be removed to gain access to cabin air filter, to remove this cover remove the screw on the cover with a 5.5mm socket, then pull out the retaining clip on the side of the cover. The filter cover can now be pulled away from the housing, and access granted to the cabin air filter.
5. Remove and slide out the old cabin filter carefully to avoid accumulated debris from spreading around. Clean the area and slide in the new cabin air filter making sure it is facing in the right air flow direction indicated on the filter. Refit all components in reverse order.

RYCO Group Pty Ltd
29 Taras Avenue
Altona North, Victoria 3025
Australia
www.rycofilters.com.au

RYCO Group
A division of GUD NZ Holdings Ltd
19 Bell Ave, Otahuhu, Auckland,
New Zealand www.ryco.co.nz